



McBean Scoreboard Instructions

*** Unplug power to box (behind) after every game please ***

NEW GAME

To clear a prior game. Press NEW GAME, on the number pad 2, press ENTER

INNING

- Press INNING +1
- Or Press INNING, on the number pad, enter the inning number, press ENTER

SCORE

- Press HOME SCORE +1 or VISITOR SCORE +1
- Or Press SET HOME SCORE, on the number pad, enter the score number, press ENTER

BALL/STRIKE/OUT

- Press BALL +1, STRIKE +1 or OUT +1
- After obvious numbers, it will clear/reset itself. For example, after 3 strikes it will clear. You can force a clear, by pressing BALL 4x, STRIKE 3x or OUT 3x.

PITCH COUNT

- Press HOME PITCH +1 or VISITOR PITCH +1

CLEAR PITCH COUNT

To clear the pitch count when there is a **pitcher change (Home or Visitor)**:

- Press **HOME PITCHES** or **VISITOR PITCHES**, press 0 on the number pad, press ENTER

To clear the pitch count for **all**:

- Press SET PITCH COUNT, on the number pad enter 0, press ENTER, press ENTER